

## Getting Started

## AVC3410

1



### Connecting the Camera to LAN

Connect the camera to your network with the provided Ethernet cable or by using the simple WPS Push Button Configuration.

(If your router supports the WPS Configuration feature, simply plug in the power cable and place it next to the router. Press the WPS button on both camera and router for 30 seconds and allow them to connect.)

2



### Connecting the AC Power Adapter

When you connect the AC power adapter, the camera is powered on automatically. You can verify the power status from the Power LED on the front panel of the camera. Once connected, the Link LED starts flashing green light and the camera is on standby and ready for use now.

3



### Accessing to the Camera

Go to the LiveLine web site to download software.

#### Event Recording:

LiveLine cameras can be set to record.

#### Connecting Your Camera To A Wireless Network:

To set up the wireless settings without WPS configuration, log into your camera from your computer.

#### Monitoring:

Go to [www.liveline.net](http://www.liveline.net) to download software.

#### Package Contents

- 1 Wireless/Wired IP Camera
- 1 AC Power Adapter
- 1 External Antenna
- 1 Wall Mount Kit
- 1 GPIO Connector
- 1 Ethernet Cable (RJ-45 type)
- 1 Quick Start Guide

AVC3410



Tilt Range: +90° - -15°



Pan Range: +165° - -165°